
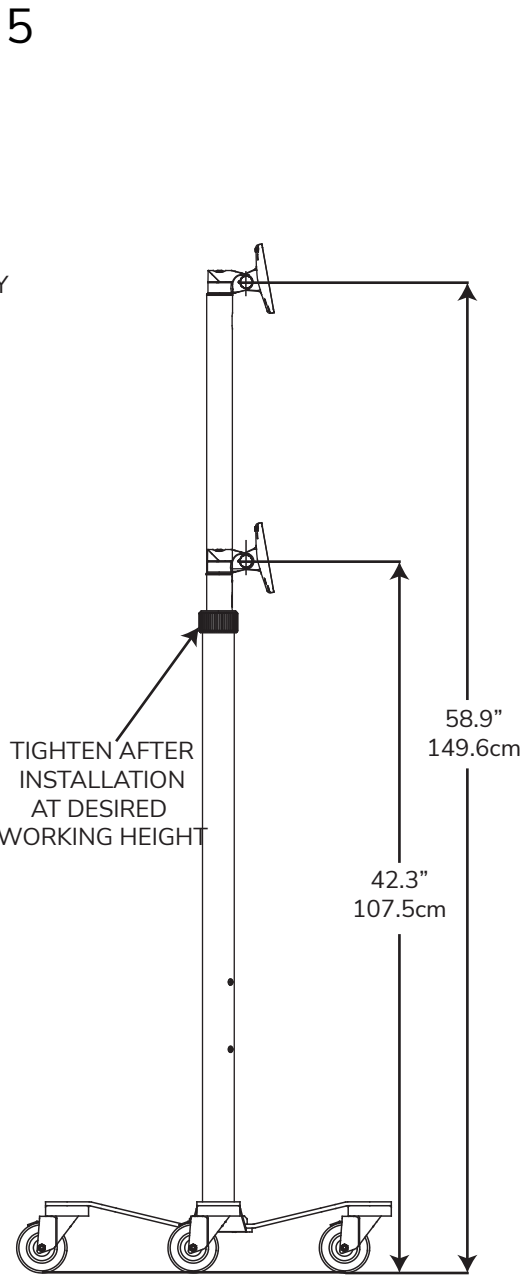
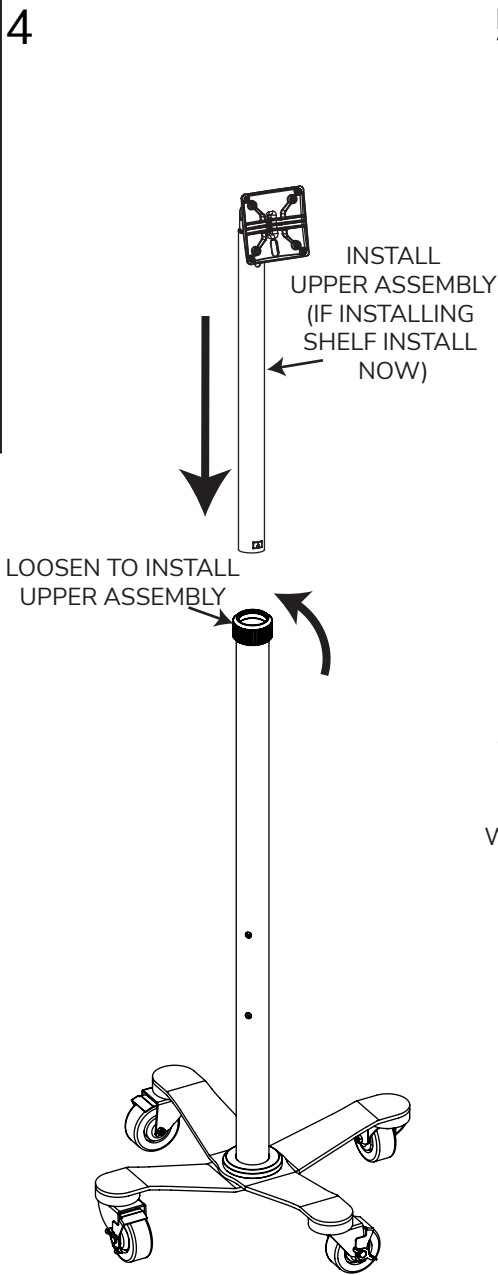
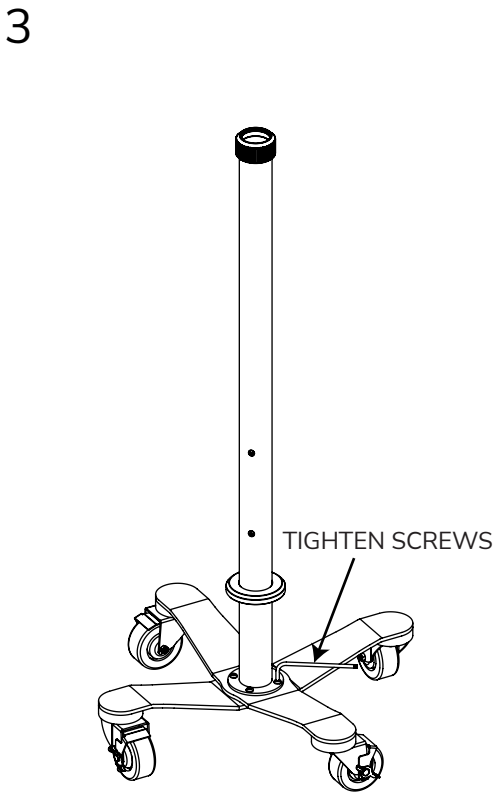
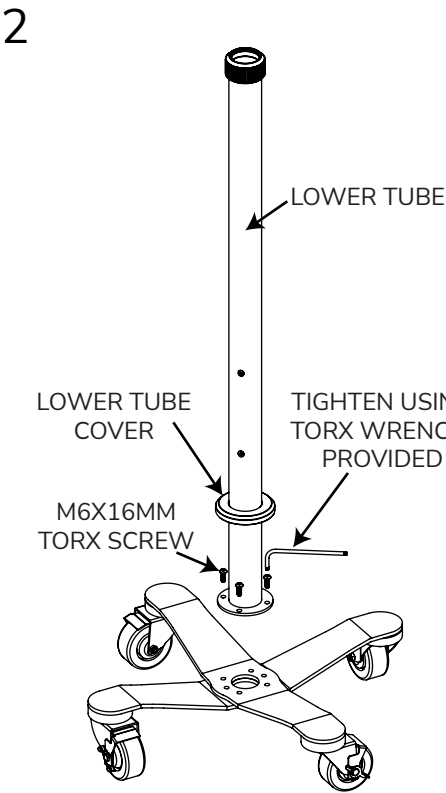





Rise Freedom Medical Rolling Cart

SKU: MCRSTDB/W


Assembly Instructions

1 PLACE CASTER ASSEMBLY ON FLOOR WITH CASTERS FACING UPWARDS

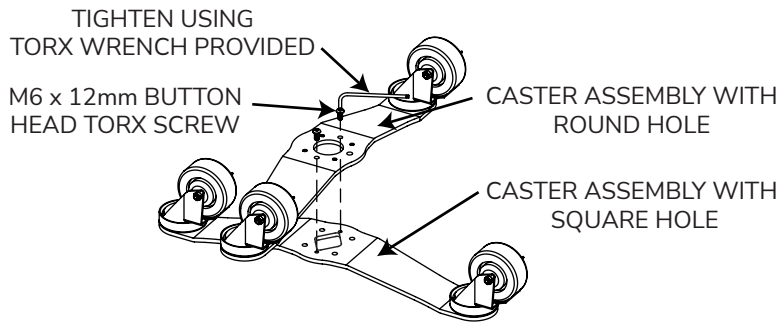

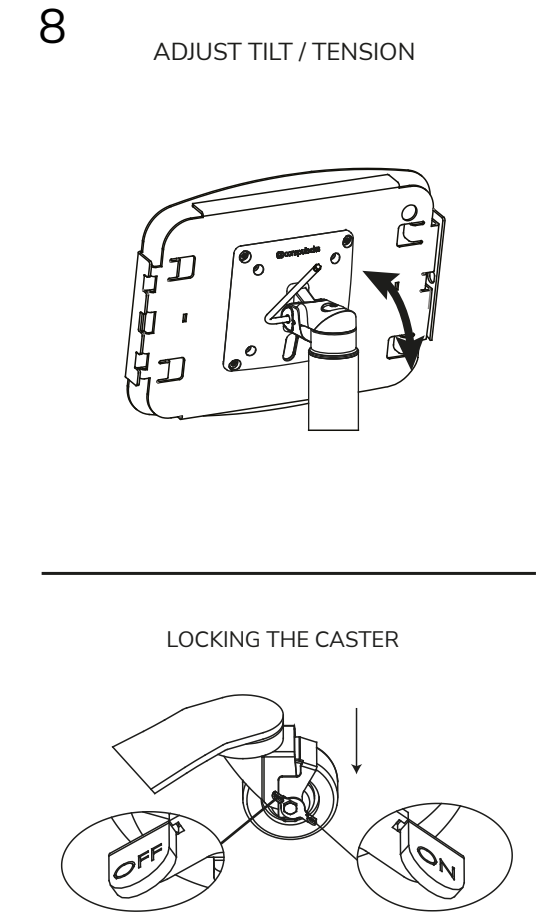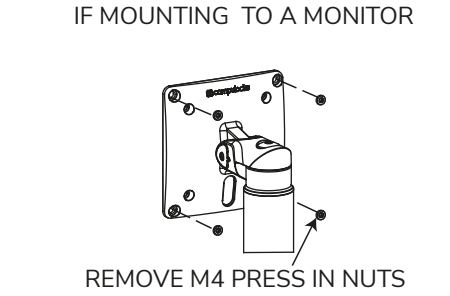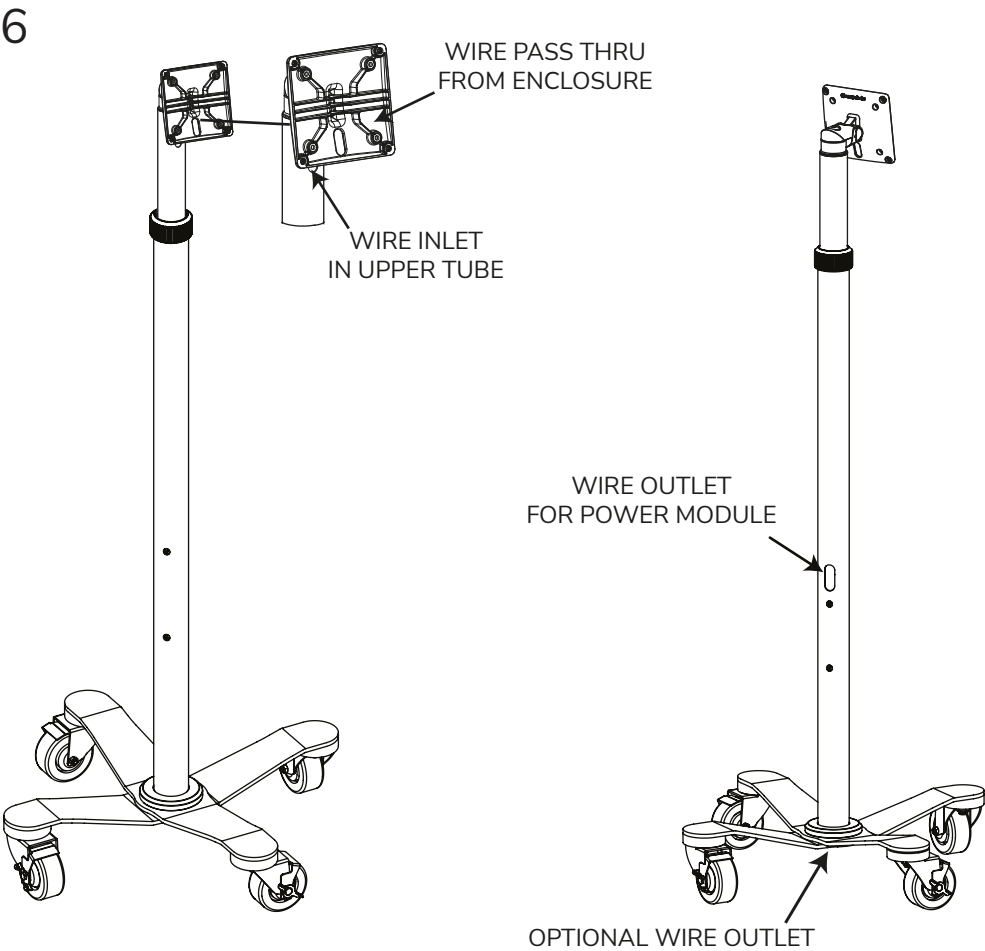


IN THE BOX

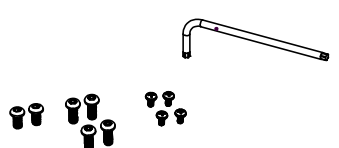


Hardware Kit

ACCESSORIES

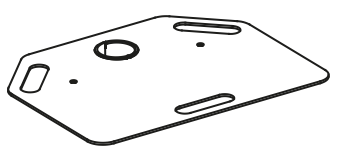


Keyboard / Writing Shelf Kit

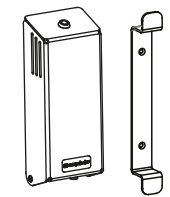


Power Module Kit



Accessory Basket Kit




JBL GO 2 Speaker Bracket

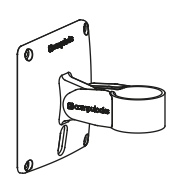


Single Add On Bracket Kit

1

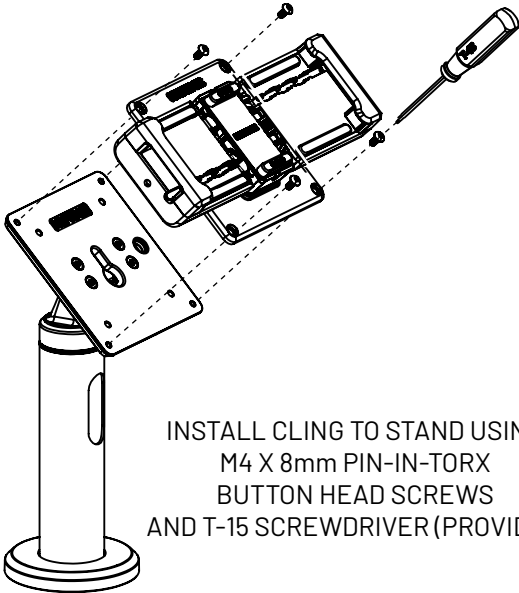

INSTALL CLING TO STAND USING
M4 X 8mm PIN-IN-TORX
BUTTON HEAD SCREWS
AND T-15 SCREWDRIVER (PROVIDED)


2

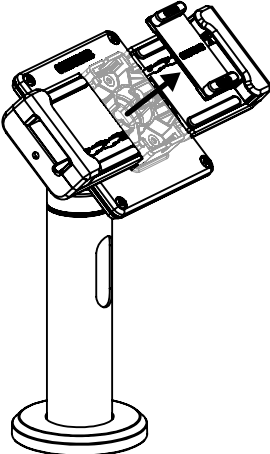

REMOVE PAD FOR CABLE ROUTING


NOTE: IF YOU ARE NOT USING A CABLE,
PROCEED DIRECTLY TO STEP 5

3

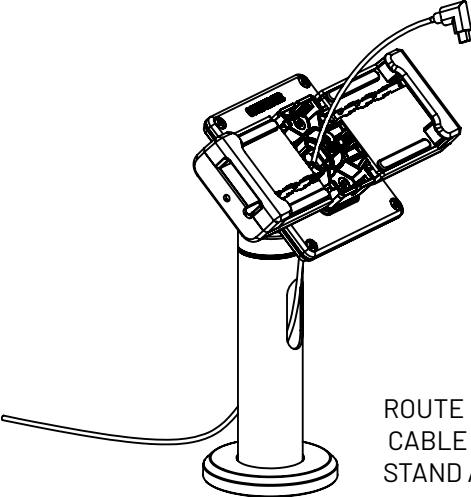

ROUTE CHARGING
CABLE THROUGH
STAND AS SHOWN


4

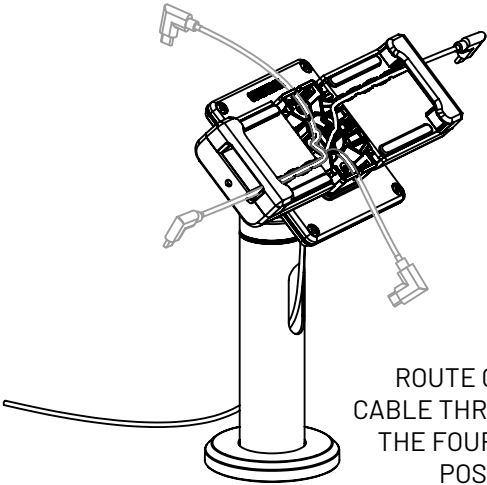

ROUTE CHARGING
CABLE THROUGH ONE OF
THE FOUR OPTIONAL
POSITIONS


5

SELECT THE CORRECT PAD
BASED ON YOUR TABLET THICKNESS.
NOTE: PAD 3 IS PRE-INSTALLED.
REPLACE IT IF YOUR TABLET
REQUIRES A DIFFERENT SIZE

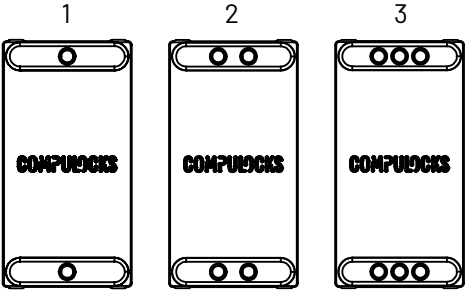

TABLET DEPTH TABLE	
PAD 1	8.2mm - 9.3mm
PAD 2	6.5mm - 8.2mm
PAD 3	5.1mm - 6.8mm


6

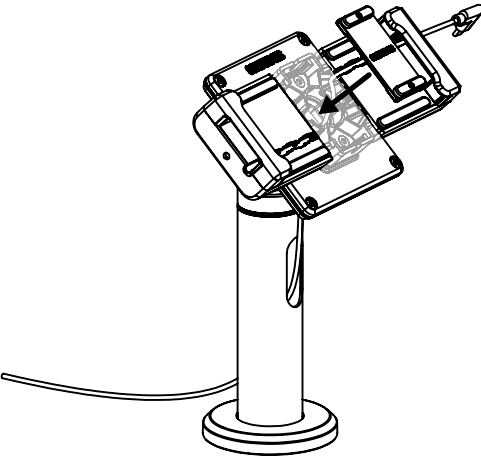

PLACE YOUR CHOSEN PAD INTO THE
CENTER CONSOLE OF THE CLING BRACKET


7

PLACE TABLET
AND THEN CONNECT
CHARGING CABLE

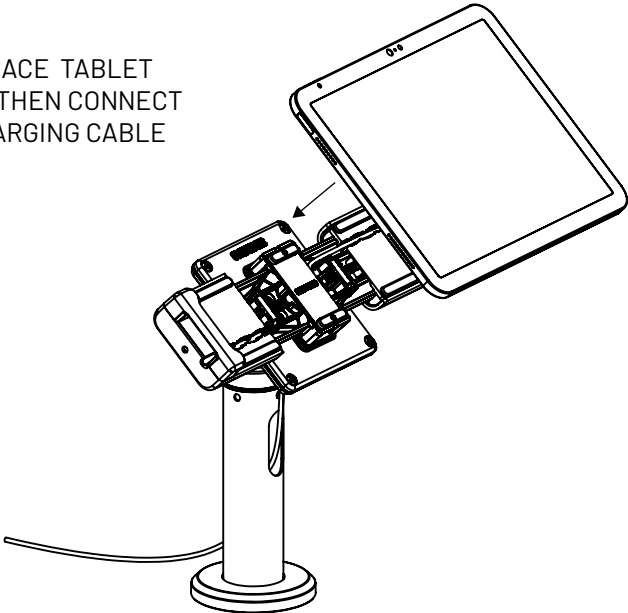





8

USE T-15 SCREWDRIVER (PROVIDED)
TO SECURE TABLET IN PLACE
BY TIGHTENING BOTH CLAMPS.

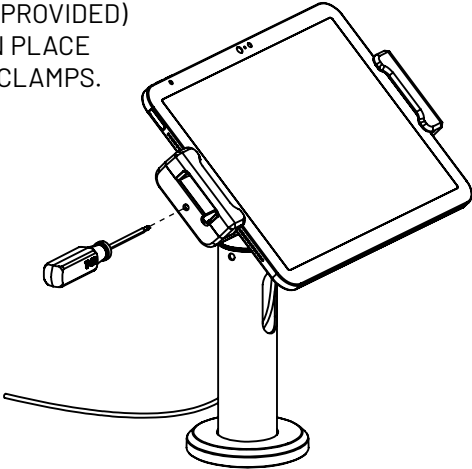


CAUTION
WHEN INSTALLING TABLET,
DO NOT OVER-TIGHTEN THE CLAMPS.
OVER-TIGHTENING COULD LEAD
TO TABLET DAMAGE

Fits VESA 100*100 Mount Stands

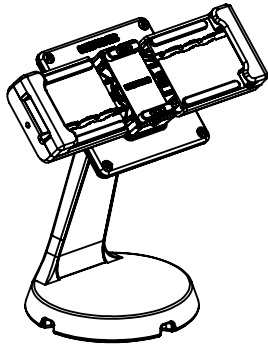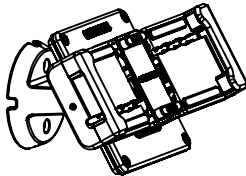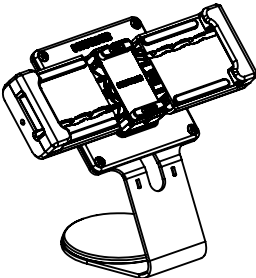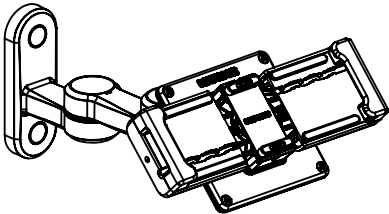


IN THE BOX



T-15 Screwdriver



M4 X 8mm Pin-in-Torx
Button Head Screws

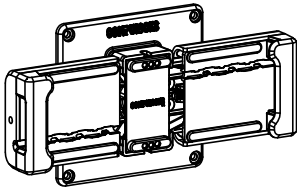

Cling Mount



Pads